

Caution!

Before Installation of your new EPC completely read this document.

EPC Software Notice


Before installing this EPC amplifier, you must have the current version of the PC Configuration Software. If using an older software version to configure or download previous software configurations to an EPC you may lose control of the device you are controlling! That could result in damage to the equipment and/or personal injury.

Verify your Software Version - To verify the version of the EPC Support Software you are running, open the EPC Support Software application, click "Help" on the toolbar, and then on "About".

Obtain the latest Software – The PC Configuration Software can be freely downloaded from the internet. Visit the page <http://oilgear.com/Products/Electronics/EPCSoftware.htm> to download. If you do not have access to the Internet, contact Oilgear and order the CD, Oilgear P/N 250858-004.

EPC Output Notice

The EPC valve driver and LVDT oscillator outputs cannot be directly shorted. Shorting the valve driver outputs terminals five (5) and six (6) or LVDT Oscillator terminals nineteen (19) and twenty (20) will result in permanent damage of the EPC device. The outputs of the EPC can be monitored with the EPC Support Software (for more information refer to the online help in the software). When attempting to measure the current at the output terminals make certain that a load is present in your meter circuit to prevent EPC damage.

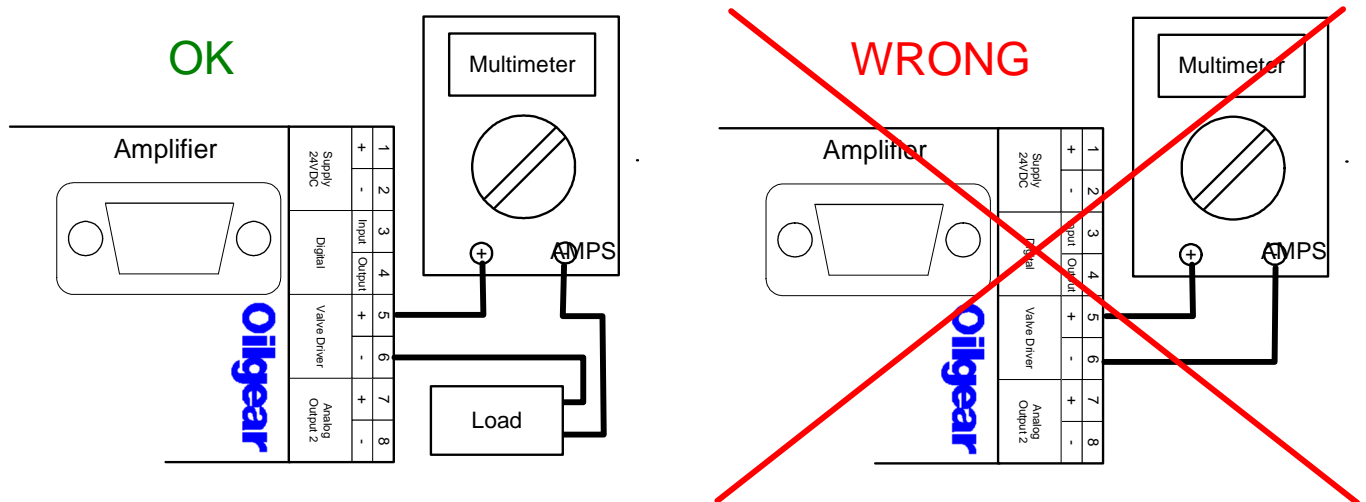

Installation and Wiring

Please refer to Oilgear Bulletin 836262 for complete Installation and Wiring Guide.