

			NO.SH.2	
NO.	PARTS.	NO.	PARTS	
1.	Case, Pump	46.	Piston, Control	
	Slide Block		Retainer, G.P. Bearing	
_	Rotor, Pump		Ring, Piston	
	Pintle, Pump		Gasket, Head, Control	
_	Cylinder, Pump*		Stem, Indicator	
	Bushing, Cylinder*		Bushing, Indicator	
	Piston, Pump		Spring, Indicator	
	Cover, Slide Block		Screw, Piston, Control	
	Cover, Rotor		Gasket, Seal Housing	
	Housing, Gear Pump		Gasket, Cover, Pintle	
	Ring, Spacer		Gasket, Housing, Control	
	Ring, Thrust		Gasket, Oil Reservoir	
	Cover, Gear Pump		Screw, Piston, Control	
	Gear, G.P. Driver		Gasket, Screw, Piston	
	Gear, G.P. Driven		Wire, Lock	
	Shaft, G.P. Stub		Valve, Pilot, Electric(DS-980)
	Flange, Coupling		Gasket, "O" Ring	
18.	Ring, Coupling		Seal, Shaft	
	Cover, Pintle		Screw, Cover, G.P.	
	Roller, Coupling		Screw, Cover, Rotor	
21.	Ring, Slide Block Spacer		Gasket, Cover Screw, G.P.	
22.	Housing, Shaft Seal		Wire, Lock	
23.	Shaft, Drive		Wire, Lock	
24.	Head, Control		Wire, Lock	
	Gasket, Adapter		Gage, Filter	
	Screw, Control Adapter		Filter, Oil	
	Gland, Control		Valve, Flow Control	
	Pin, Taper	74.	Bearing, Rear Shaft	
	Knob, Control		Bearing, Front Shaft	
	Handle, Adjusting, Control		Bearing, Front Rotor	
	Dowel, Liner, Slide Block		Bearing, Rear Rotor	
	Dowel, Liner, Case	78.	Bearing, G.P. Roller	
	Liner, Case	79.	Screw, Pintle Cover	
34.	Liner, Slide Block	81.	Ring, Piston, Control	
35.	Screw, Adjusting, Control	84.	Plug, Pipe	
36.	Screw, Gland, Control	86.	Key, Pintle	
37.	Packing, Control	124.	Screw, Cover, Slide Block	
38.	Key, G.P. Drive		Adapter, Piston, Control	
39.	Spacer, Coupling		Piston, Control	
	Shim, Front Shaft Bearing		Screw, Cap, Sock. Hd.	
	Shim, Front Rotor Bearing		Screw, Housing, G.P.	
	Shim, Slide Block Spacer		Head, Control	
	Shim, Rear Bearing, Rotor		Washer, Lock	
	Shim, Liner, Slide Block	159.	Nut, Lock	
45.	Spacer, Piston, Control			

*Parts 5 and 6 are furnished only as a complete assembly.

NOTE: When ordering parts be sure to give serial number of pump.