Installation Drawing


PVWJ 064

THE WORLD DEMANDS

MGFAR

Basic Pump Without Controls - Side Ported



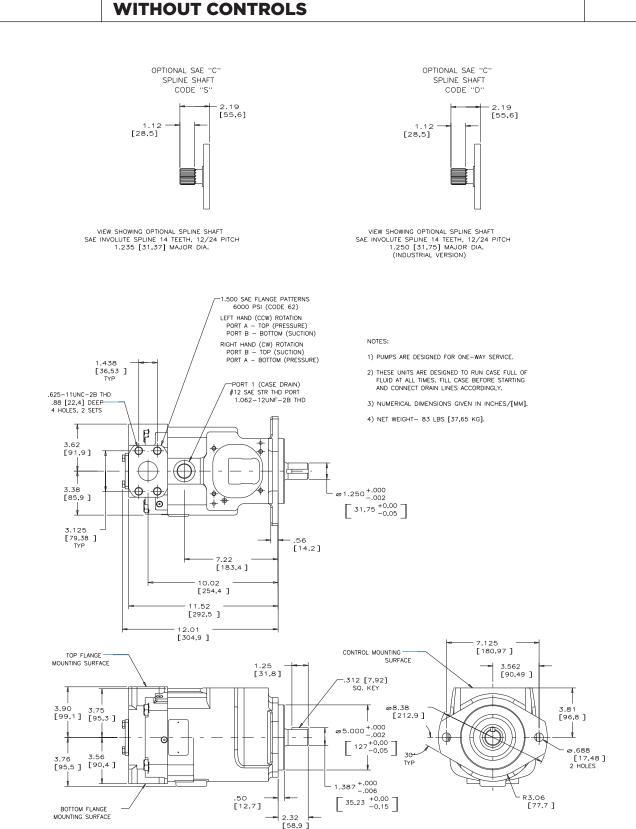

520034-303