



## **Table of Contents**


Adjuster and Purge Port Locations .....	2
Control Port Locations .....	2
Mounting Flange, Lifting Hook, and Rotation Designation.....	3
Driveshafts.....	3
Case Drain Locations.....	4
Clearance Dimensions.....	5
Center of Gravity and Dry Weight .....	5
Valve Plate Views.....	6
Tandem Pump Adapters .....	7
Circuit Diagrams.....	8-13




## ADJUSTER AND PURGE PORT LOCATIONS

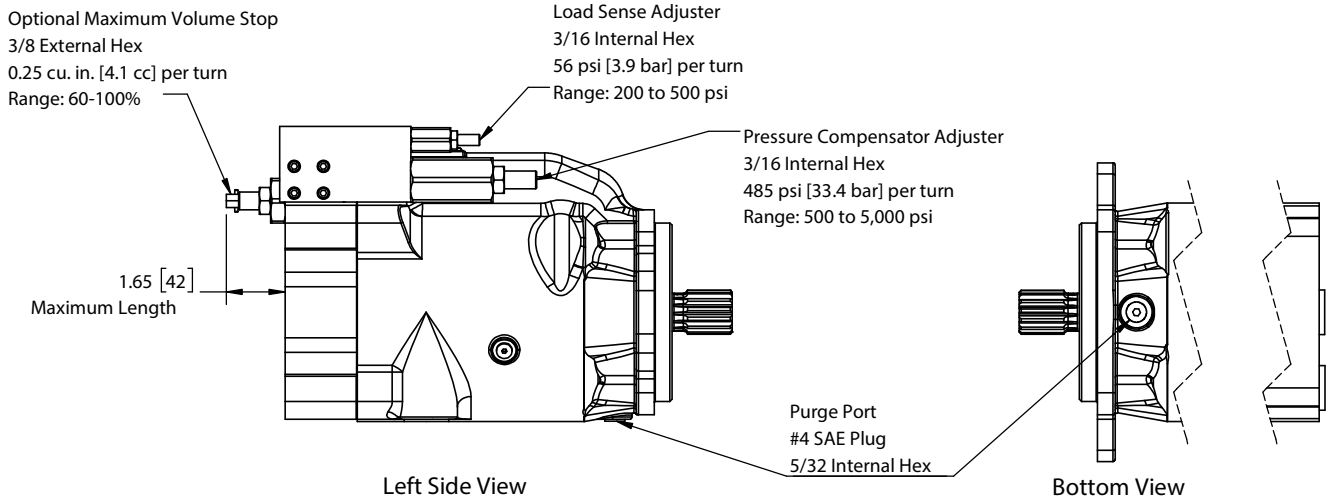


## CONTROL PORT LOCATIONS




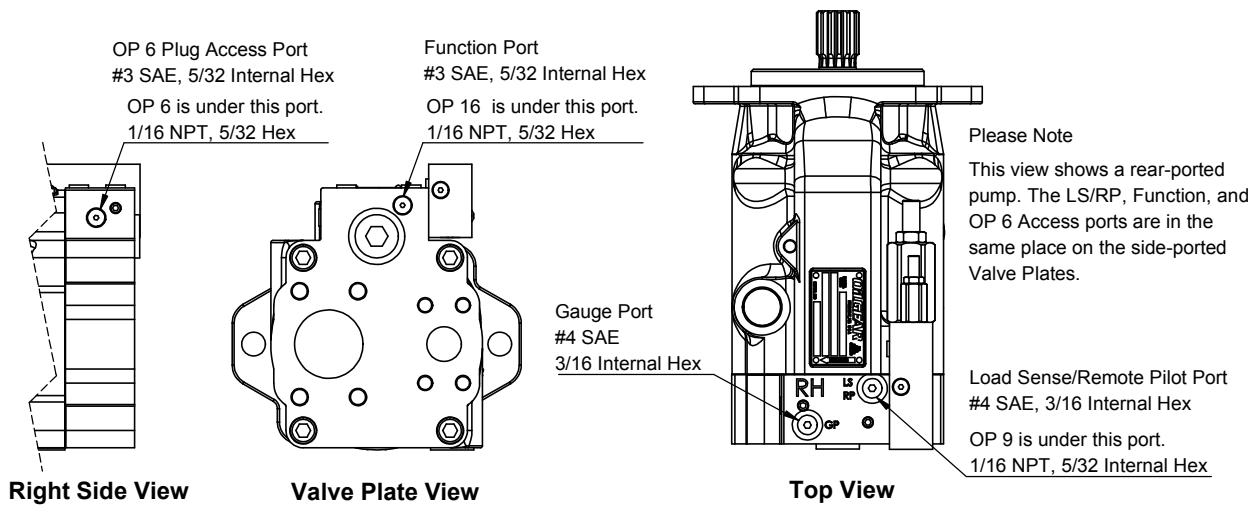





## MOUNTING FLANGE, LIFTING HOOK, AND ROTATION DESIGNATION

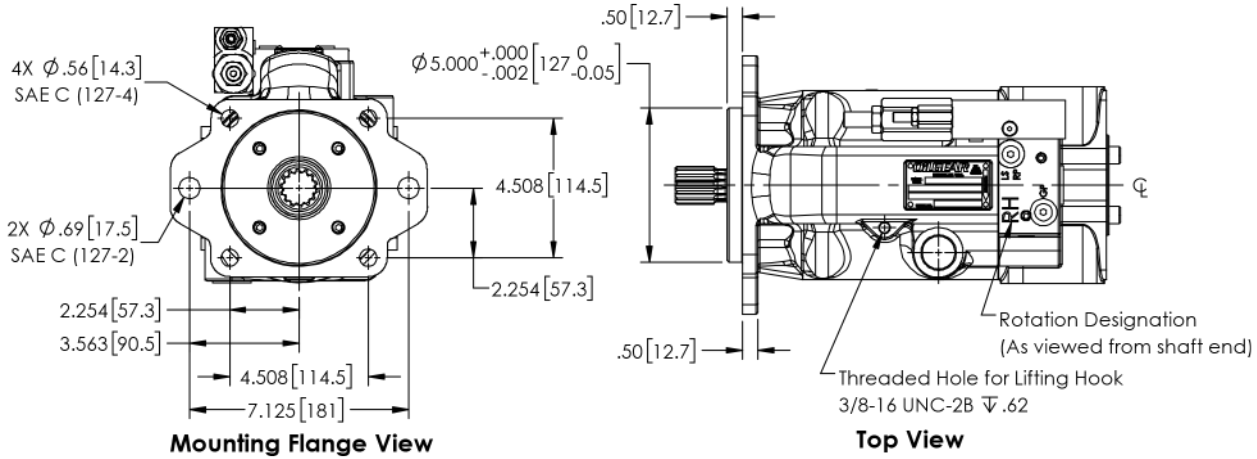


## DRIVESHAFTS

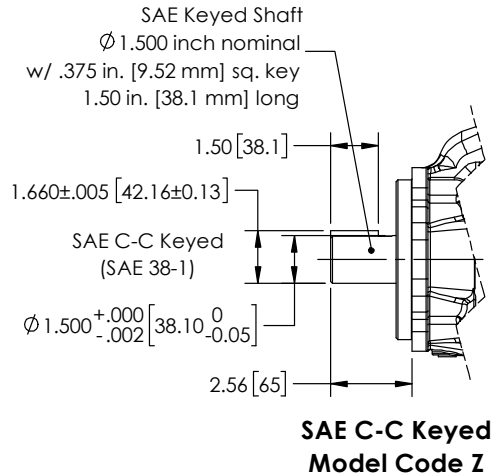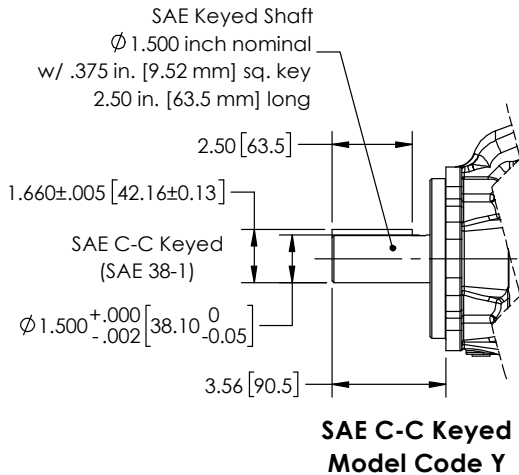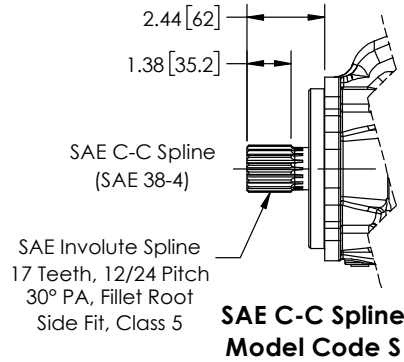
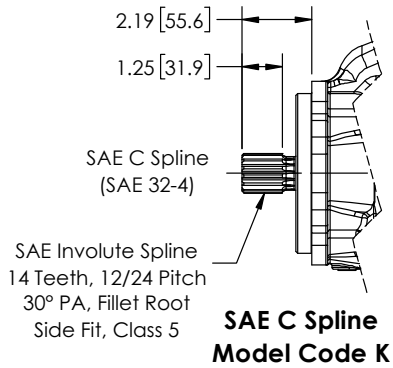





## CASE DRAIN LOCATIONS

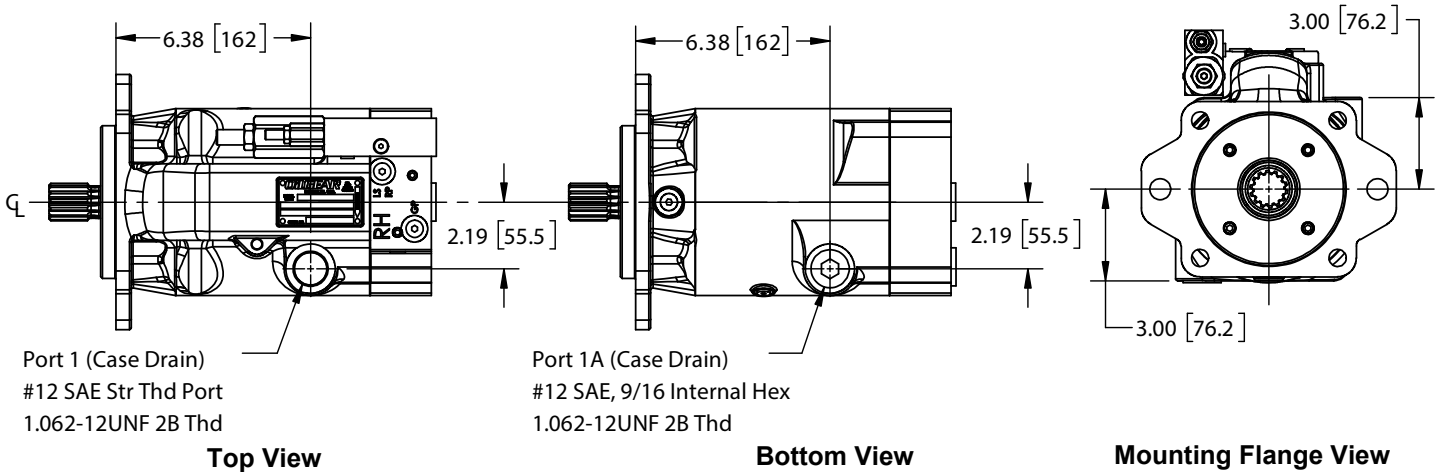


## CLEARANCE DIMENSIONS - PRESSURE COMP. & LOAD SENSE CONTROL

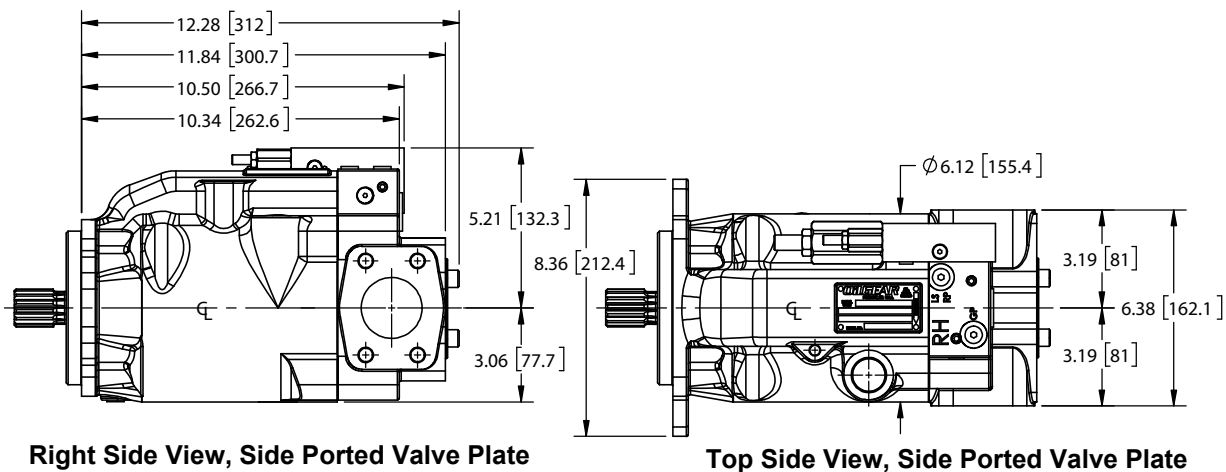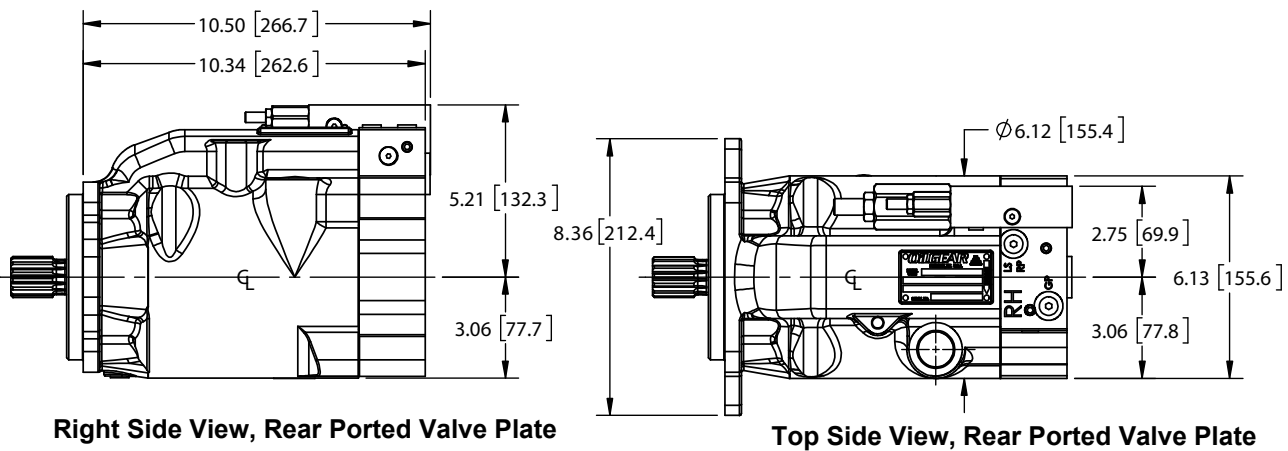





## CLEARANCE DIMENSIONS - HORSEPOWER LIMITER CONTROL

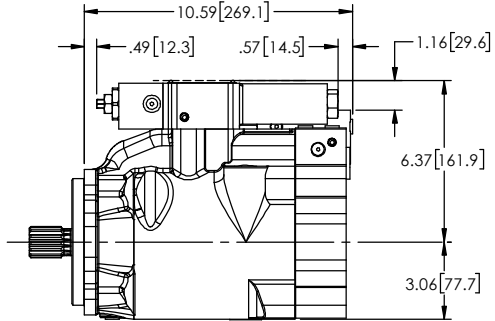

**Right Side View, Rear Ported Valve Plate**  
(Reference Previous Views for all other Dimensions)

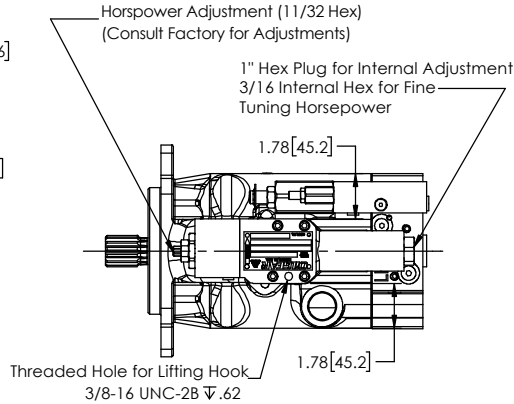

**Top View, Rear Ported Valve Plate**  
(Reference Previous Views for all other Dimensions)

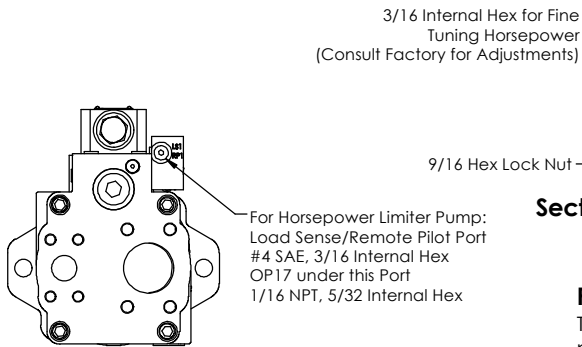


**Rear View, Rear Ported Valve Plate**  
(Reference Previous Views for all other Notes)

### Section View, Internal Fine Tuning Horsepower Adjustment


#### Please Note

These views show a rear-ported pump. These dimensions and descriptions apply to all Horsepower pumps of this size.

## CENTER OF GRAVITY AND DRY WEIGHT

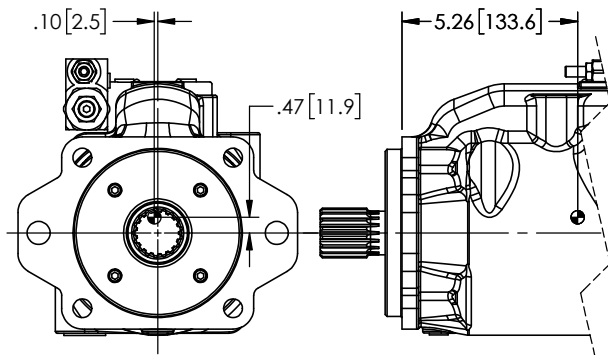


**Rear Port Valve Plate - 73 lbs [33.1 kg]**

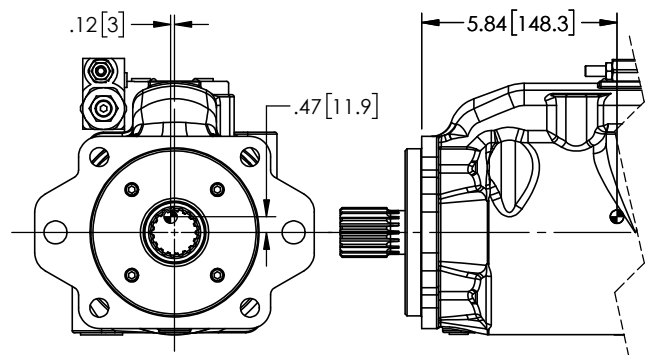


**Side Port Valve Plate - 83 lbs [37.6 kg]**

**Rotational Moment of Inertia: 47 lb\*in<sup>2</sup> [137.5 kg\*cm<sup>2</sup>]**




## VIEW PLATE VIEWS

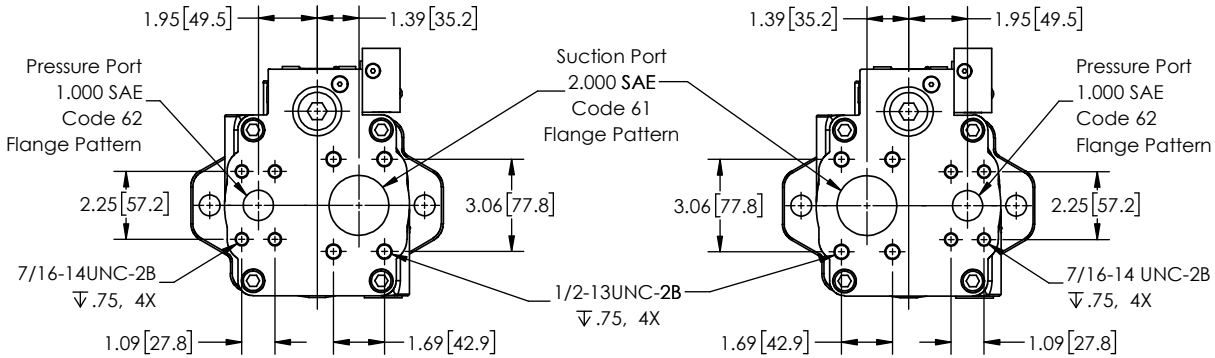


Rear Port Valve Plate, Left Hand Rotation (CCW)





Rear Port Valve Plate, Right Hand Rotation (CW)

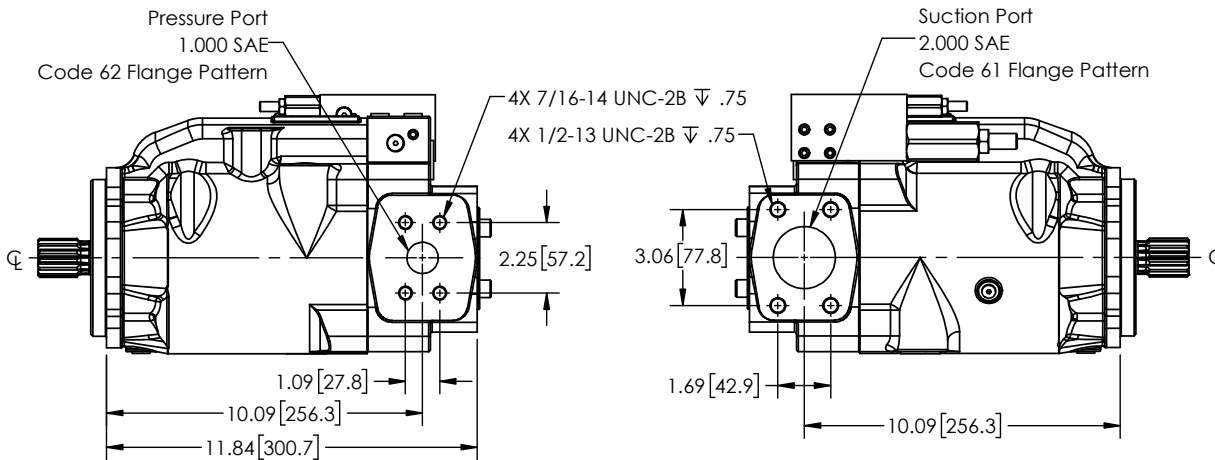


Side Port Valve Plate, Left Hand Rotation (CCW)

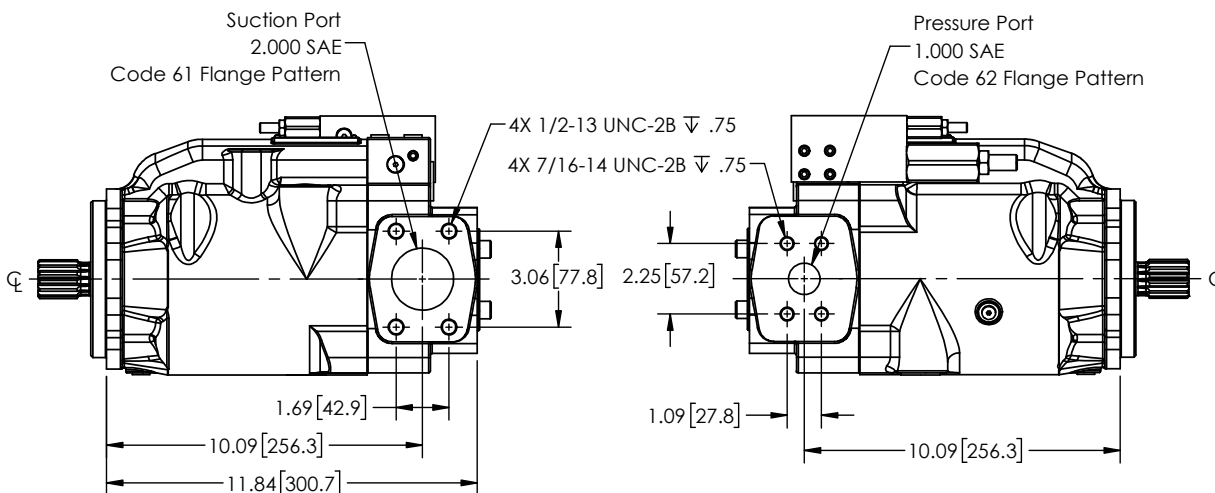

Side Port Valve Plate, Right Hand Rotation (CW)

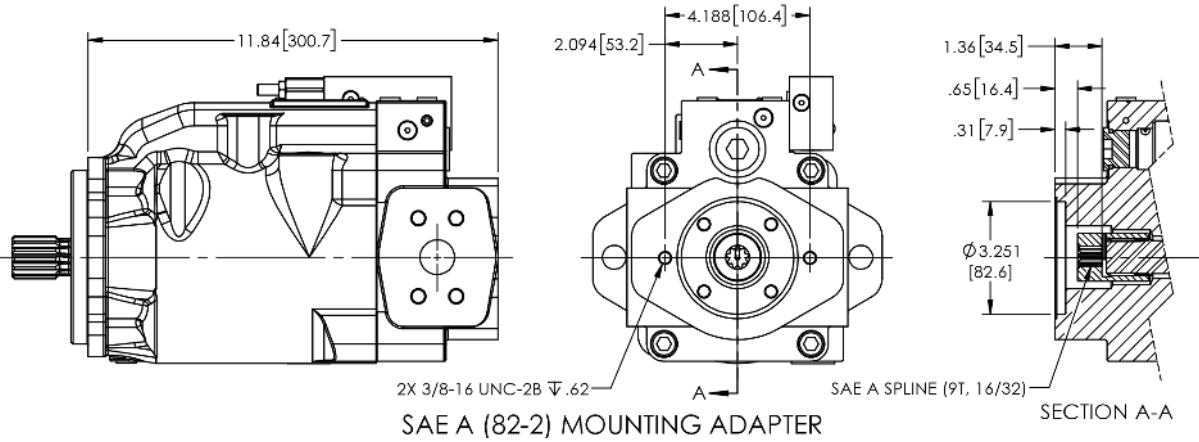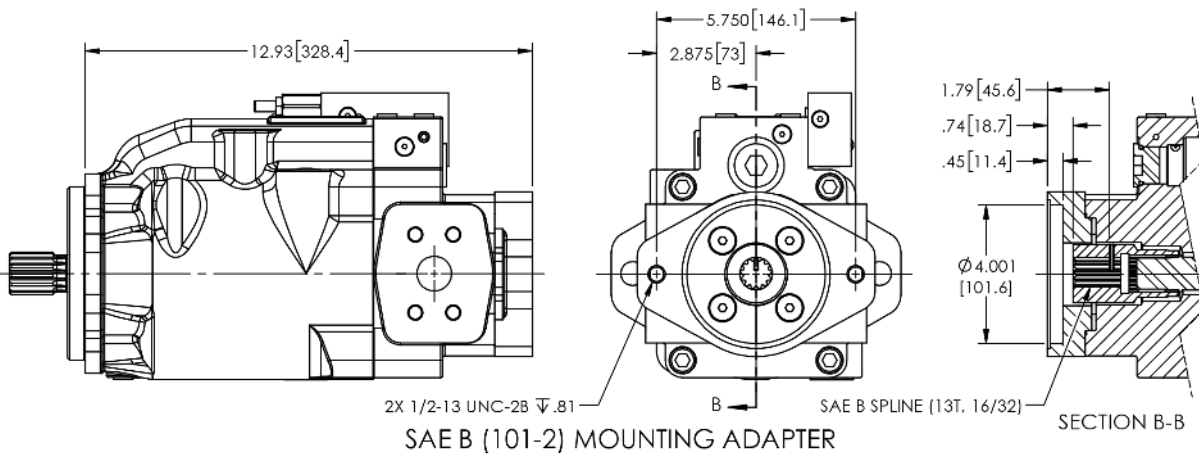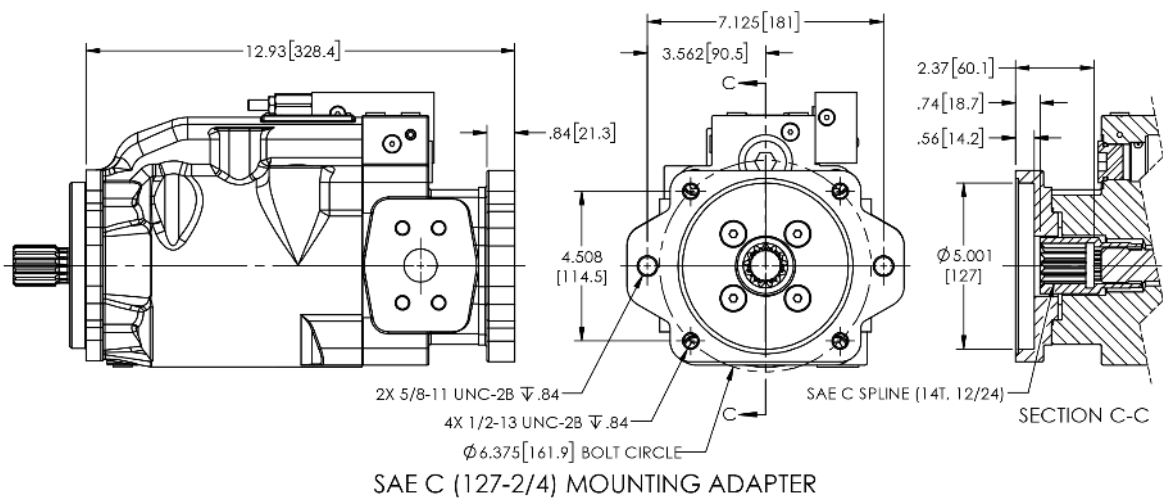**TANDEM PUMP ADAPTERS****SAE A (82-2) MOUNTING ADAPTER****SAE B (101-2) MOUNTING ADAPTER****SAE C (127-2/4) MOUNTING ADAPTER**





## CIRCUIT DIAGRAMS

### ■ Pressure Compensator Only: P-1NN

Ensures maximum pump flow until outlet pressure reaches preset control pressure setting, then regulates output flow to match the requirements of the system while maintaining preset output pressure.

- OP 16 is OPEN
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The LS/RP Port is PLUGGED

*All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.*

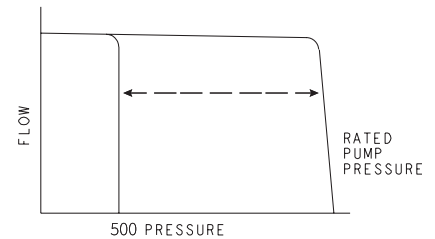
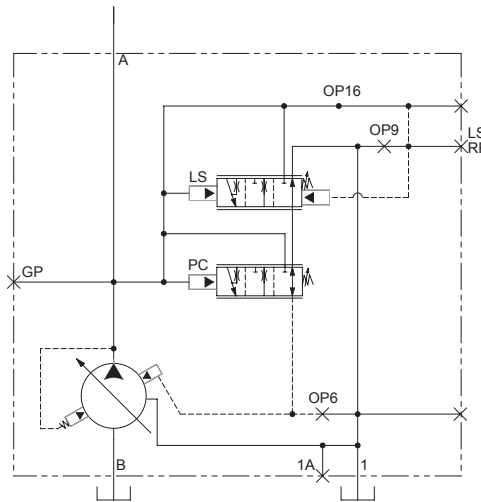



### ■ Pressure Compensator and Load Sense: P-1NN/F or P-1NN/B

A constant flow output is maintained for a given flow control valve setting regardless of changes in drive speed and/or working pressure.

- OP 16 is PLUGGED
- OP 9 is PLUGGED in P-1NN/F, or uses optional orifice in P-1NN/B
- OP 6 is PLUGGED
- The customer-supplied Load Sense circuit is plumbed into the LS/RP Port.

*All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.*

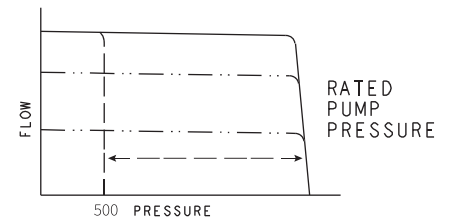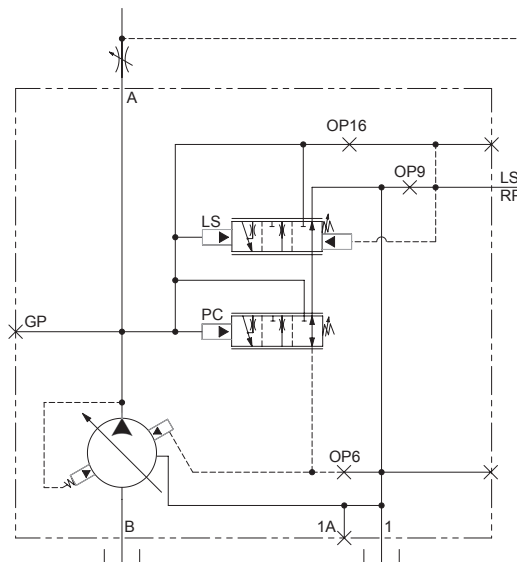



### CIRCUIT DIAGRAMS



#### ■ Remote Pressure Compensator: P-RNN


A customer-supplied remote compensator circuit is plumbed into the LS/RP port on the pump. If the remote compensator opens to vent fluid, then the pump will compensate as if the pump's integral compensator reached its pressure setting.

The on-board compensator is still active, and will independently respond to compensate.

- OP 16 has a  $\varnothing$  0.031" ORIFICE
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The customer-supplied Remote Compensator circuit is plumbed into the LS/RP Port.
- The Remote Compensator requires a flow rate of approximately 0.25 GPM.
- The remote pilot relief valve requires a 0.040" stability orifice.
- If a 1/4" line is used to connect the remote compensator to the LS/RP port, then the recommended line length is 6 to 30 feet.
- If a 3/8" line is used to connect the remote compensator to the LS/RP port, then the recommended line length is 3 to 30 feet.

*All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.*

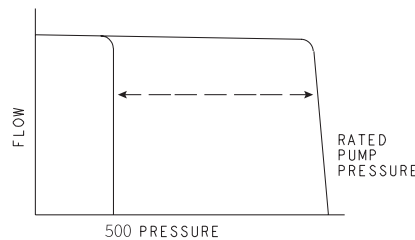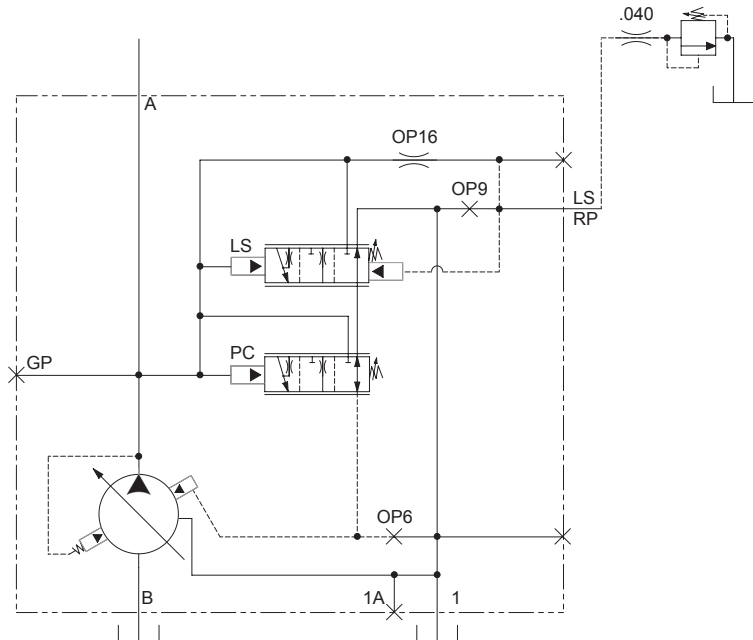



## CIRCUIT DIAGRAMS



### ■ Pressure Compensator Only: P-1NN/F


A customer-supplied remote compensator circuit is plumbed into the LS/RP port on the pump. If the remote compensator opens to vent fluid, then the pump will compensate.

The on-board compensator and load sense functions are still active, and will independently respond to regulate flow.

- OP 16 is PLUGGED
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The customer-supplied Remote Compensator/Load Sense circuit is plumbed into the LS/RP Port. The circuit requires a  $\varnothing$  0.031" orifice between the Remote Compensator and Load Sense components.
- The Remote Compensator requires a flow rate of approximately 0.25 GPM.
- The remote pilot relief valve requires a 0.040" stability orifice.
- If a 1/4" line is used to connect the remote compensator to the LS/RP port, then the recommended line length is 6 to 30 feet.
- If a 3/8" line is used to connect the remote compensator to the LS/RP port, then the recommended line length is 3 to 30 feet.

All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.

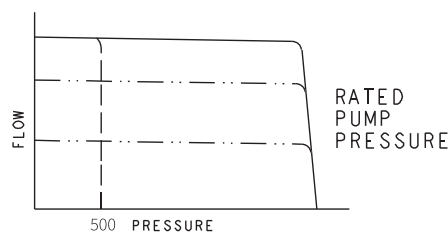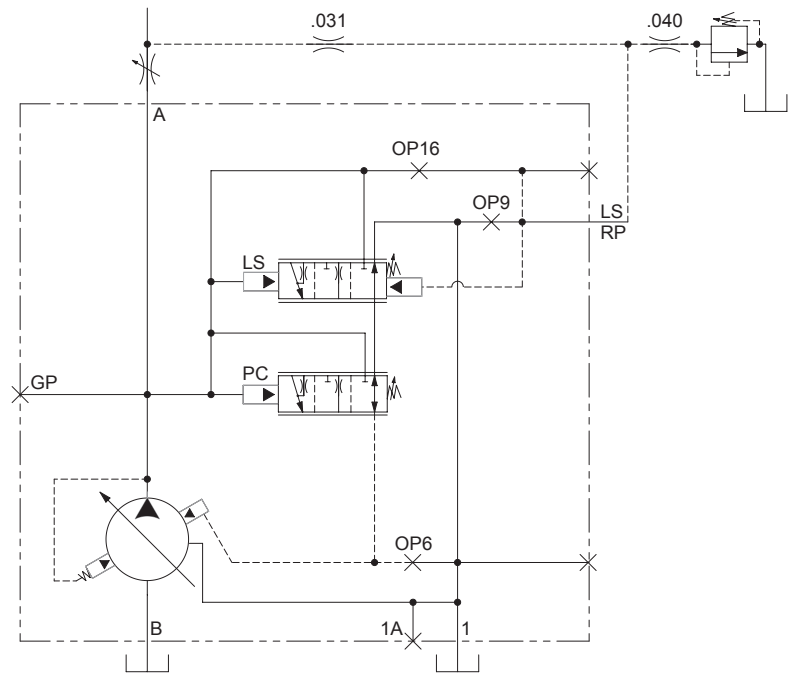





## CIRCUIT DIAGRAMS

### ■ Horsepower Limiter w/Pressure Compensator: P-1NN/H

Automatically reduces delivery as unit pressure rises to limit horsepower consumption. The pressure compensator control over rides the horsepower control when the system pressure reaches the preset control pressure.

- OP 18 has a Ø 0.040" ORIFICE
- OP 17 is OPEN
- OP 16 has a Ø 0.031" ORIFICE
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The LS1/RP1 Port is PLUGGED

All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.

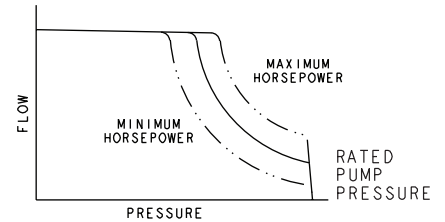
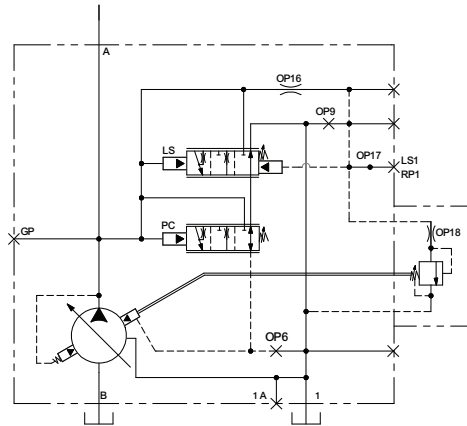



### ■ Horsepower Limiter w/Load Sense: P-1NN/G

A constant flow output is maintained for a given flow control valve setting, regardless of changes in drive speed and/or working pressure, until (limited) horsepower setting is reached. Control then automatically reduces delivery, as unit pressure rises, to limit horsepower consumption.

- OP 18 has a Ø 0.040" ORIFICE
- OP 17 has a Ø 0.031" ORIFICE
- OP 16 is PLUGGED
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The customer-supplied Load Sense circuit is plumbed into the LS1/RP1 PORT.

All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.

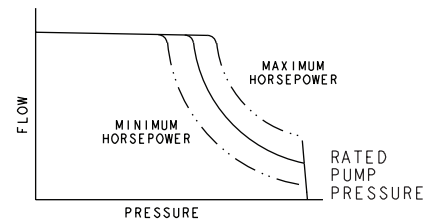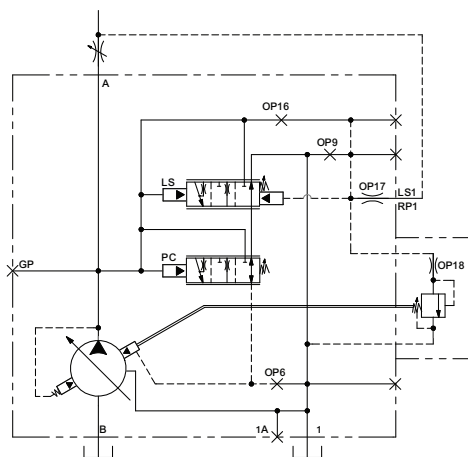



## CIRCUIT DIAGRAMS



### ■ Horsepower Limiter w/Remote Pressure Compensator: P-RNN/H


Automatically reduces delivery as unit pressure rises to limit horsepower consumption.

A customer-supplied remote compensator circuit is plumbed into the LS1/RP1 port on the pump. If the remote compensator opens to vent fluid, then the pump will compensate as if the pump's integral compensator reached its pressure setting.

- OP 18 has a  $\varnothing$  0.040" ORIFICE
- OP 17 is OPEN
- OP 16 has a  $\varnothing$  0.031" ORIFICE
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The customer-supplied Remote Compensator circuit is plumbed into the LS1/RP1 Port.
- The Remote Compensator requires a flow rate of approximately 0.25 GPM.
- The remote pilot relief valve requires a 0.040" stability orifice.
- If a 1/4" line is used to connect the remote compensator to the LS1/RP1 port, then the recommended line length is 6 to 30 feet.
- If a 3/8" line is used to connect the remote compensator to the LS1/RP1 port, then the recommended line length is 3 to 30 feet.

*All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.*

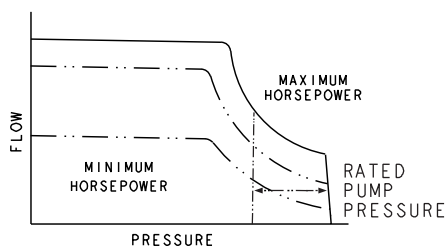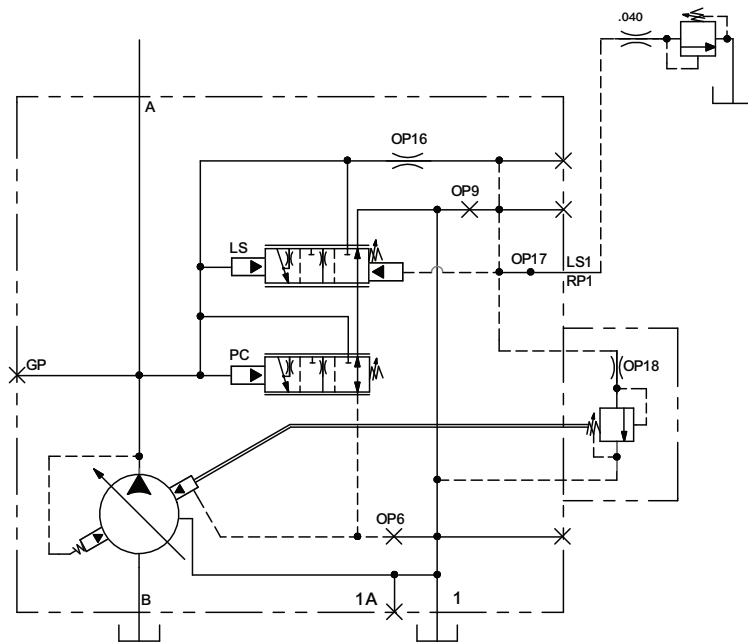





### CIRCUIT DIAGRAMS

#### ■ Horsepower Limiter w/Load Sensing w/Remote Pressure Compensator: P-RNN/G

Load sensing control matches flow and pressure to load demand until (*limited*) horsepower setting is reached. Control then automatically reduces delivery as system pressure rises.

A customer-supplied remote compensator circuit is plumbed into the LS1/RP1 port on the pump. If the remote compensator opens to vent fluid, then the pump will compensate as if the pump's integral compensator reached its pressure setting.

- OP 18 has a Ø 0.040" ORIFICE
- OP 17 is OPEN
- OP 16 is PLUGGED
- OP 9 is PLUGGED
- OP 6 is PLUGGED
- The customer-supplied Remote Compensator/Load Sense circuit is plumbed into the LS1/RP1 Port. The circuit requires a Ø 0.031" orifice between the Remote Compensator and Load Sense components.
- The Remote Compensator requires a flow rate of approximately 0.25 GPM.
- The remote pilot relief valve requires a 0.040" stability orifice.
- If a 1/4" line is used to connect the remote compensator to the LS1/RP1 port, then the recommended line length is 6 to 30 feet.
- If a 3/8" line is used to connect the remote compensator to the LS1/RP1 port, then the recommended line length is 3 to 30 feet.

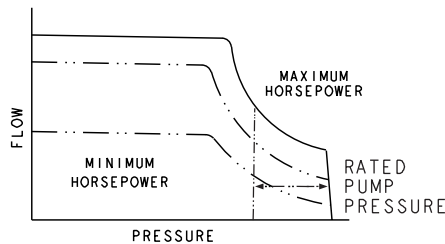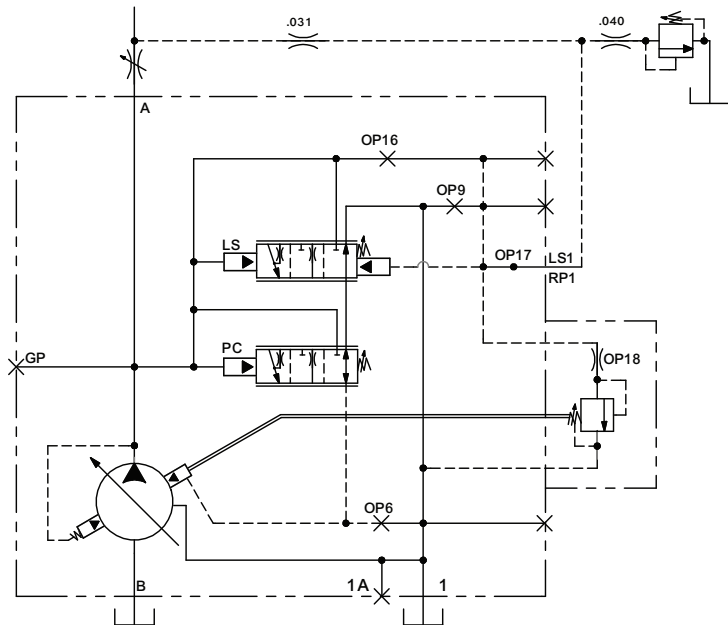

All internal plugs and orifices use 1/16 NPT plugs and 5/32 internal hex wrenches.